


Precision Racing Products

Yamaha Raptor 250

Inspect your steering stem diameter to ensure proper fit. A letter is stamped on your stem clamp that corresponds to the diameter it was designed to fit.

A stamped on clamp	B stamped on clamp	C stamped on clamp	D stamped on clamp
Stems 1.25dia.+-.03	Stems 1.35 dia +-.03	Stems 1.04 dia+-.04	Stems 1.13 dia +-.03

- 1) Installing the unit make sure the wheels of the quad are pointed straight and the lever to the stabilizer is at 90 deg.
- 2) Put the stem clamp on loose and the bottom clamp on loose as well. Slide the stabilizer forward or back so that the lever and stem clamp are at 90 deg. Tighten the bottom clamp **1** with screws **2** from the back side (22 ft-lb.)

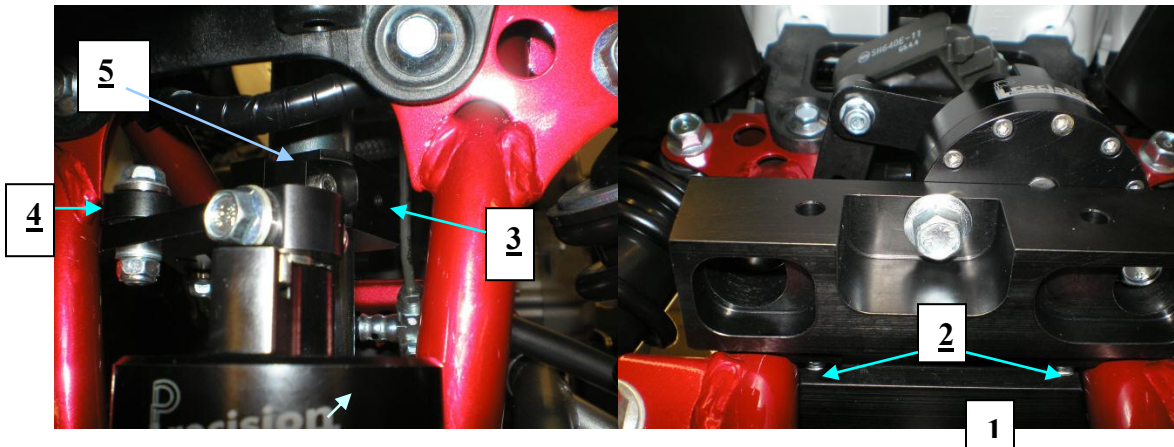


- 3) Turn in the set screw **3** until it touches then a ¼ turn more. Make sure the “O” rings **4** on the link-arm are nice and straight if not slide the stem clamp up or down. Now tighten the stem clamp screws **5** (13 ft-lb.) this should drive the set screw in tight.
- 4) Re-check alignment of the components. And make sure you can hit the steering stops.
- 5) Wires tie any lines that may interfere with the stabilizer or its linkage.

Precision Racing Products

Adjusting the dampening

Starting point recommendations are as follows: Closed, or at zero, is turning the adjuster screws full clockwise finger tight. From this point count the notches as you turn the adjuster counterclockwise, 4 notches is ½ turn from closed, this will provide a reasonably high level of impact resistance. The lighter the turning resistance the less impact resistance will be absorbed. Find the setting that is right for you.

Clockwise “H” Harder

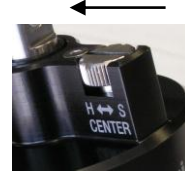

	Standard and Pro		Elite & PRO4	
	Center	Sides	Center	Sides
MX track average roughness	6	8	10	14
MX Rough Track (Glen Helen)	4	6	7	11
TT Track	10	10	14	14
Cross Country average roughness	8	10	12	14
Cross Country rough course	6	10	10	12
Desert racing average roughness	5	8	9	12
Desert racing rough course	3	5	6	9
Trail riding average roughness	8	10	10	12
Trail riding rough course	6	8	10	12
Dunes	5	10	9	14

Once you become used to the stabilizer you can run it stiffer than these starting points.


If the track is slippery, we recommend letting the sides out 2-3 notches and firming up the center ½ -1 notch. Adjusting the center has almost no effect on the side, but adjusting the sides will affect the center slightly (we need to do this to keep the smooth transition). That is the reason for the firm up the middle.

Cold and Hot conditions: Some adjustments may be needed when air temperatures are hot or cold. Oil will thin on a hot day so you may need to compensate by adjusting the screws clockwise and counterclockwise on a cold day.

Adjusting for temperature of the day. Let’s say you like the way your stabilizer feels on a 65F (18C) day. Then on a 90F (32C) day reduce your setting by half (4 notches out would be 2). On a 40F (4C) day double your setting (4 notches would be 8). On cold days near freezing work the bars back and forth 20 times to get the oil near operating temperatures. Below freezing proceed with caution and ensure that your steering does not become too stiff to safely operate the vehicle.

Precision Racing Products Stabilizer Maintenance

The precision racing products steering stabilizer is designed to give you many hours of hard riding with very little maintenance needed.

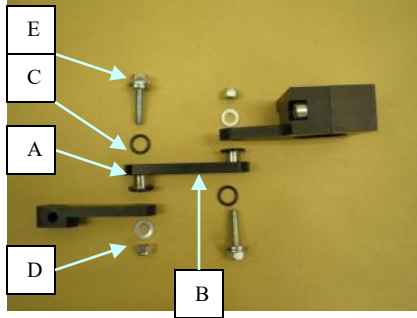

Re-grease the linkage every 20 hours, more often if pressure washing the quad. Remove linkage bolts, clean and re-grease link-arm and bushings. Re-assemble then torque screws to 9 ft-lb.
A=bushings, B=link-arm, C=O-ring small
D=washer & nut E=cupped washer & screw

- Change the oil every 100 hours of use or every year min.
- Change seals every 200 hours of use or every 2 years min
- Spray silicon or Tri-flow (NOT WD40) on rubber seals of the linkage and shaft every 4 hours of use and inspect torque 9 ft-lb.
- Spray silicon or Tri-flow on adjusting screws and shaft dust seal every 4 hours of use, and check torque of screw through stabilizer shaft to 13 ft-lb.
- Every 200 hours, Remove bottom clamp from mounting plate check torque on mounting plate to the stabilizer (30 ft-lb), re-torque clamp to installation spec.

Pressure washers are the natural enemy of any precision sealed mechanism. Be careful not to drive dirt into the seals with the pressure washer.

Check the website for updates on the maintenance of your stabilizer.

www.precision-rp.com